


Catchbasin With Inner Tub


1. Place inner basin in desired location.
2. Stack bricks (included) or some solid foundation with a recess for plumbing if necessary upon which the stone will sit.
3. Place wire mesh on top of inner basin, aligning center hole with plumbing recess in the bricks or foundation.
4. Place pump under wire mesh with the plug running out between the wire mesh and inner basin.
5. If you have a bamboo piping system,
6. Install granite piece on top of bricks, or foundation, and wire mesh.
7. Hook up plumbing, (i.e., hose) to outflow nipple on pump.
8. If you have a bamboo piping system,
9. Attach wire mesh to the rim of inner basin using screws (included), using a drill with a screw bit is recommended.
10. Fill inner basin with water and test fountain set-up.
11. Make any necessary adjustments.
12. Assemble redwood surround (with hinge pins) and place over entire piece. (Please note: the granite surround must first be placed around the piece and then the hinge pins installed, as it is often too heavy and awkward to lift over the top once completely assembled.).
13. Cover wire mesh with pebbles.



WIRE MESH

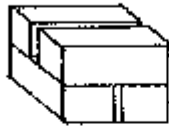

BRICKS

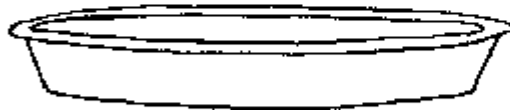

TUB



SURROUND