


BAMBOO VESSEL INSTALLATION

©2007 STONE FOREST, INC.

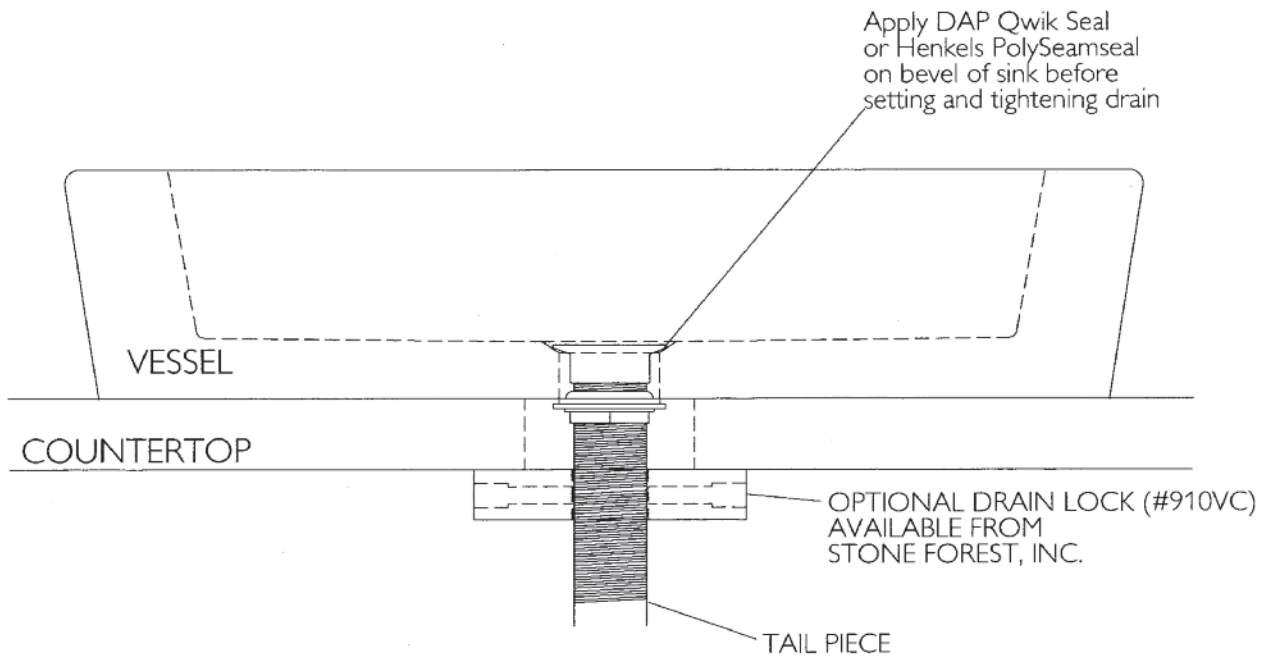

DO NOT USE SILICONE OR PLUMBERS PUTTY FOR INSTALLATION.

- Fasten drain to vessel per drain instructions. DAP Qwik Seal or Henkels PolySeamseal can be used between the sink and drain.
- A 3" hole in counter material is needed.
- Secure the vessel to the countertop using a bead of the DAP Qwik Seal or Henkels PolySeamseal approximately 1/2" in from the bottom edge of the sink.
- A drain lock is available from Stone Forest if needed. This lock fastens to the drain pipe and is used to anchor the vessel to the counter material using the drain.

STONE
FOREST